

DIY MAGNETIC SCREEN DOOR STEP-BY-STEP INSTRUCTIONS.

SUPPLIES


- 2 large, rectangular pieces of mesh
- About 4 dozen strong disc magnets
- Sewing supplies

INSTRUCTIONS

Measure & Cut

First, measure the door frame. Cut the two pieces of mesh so they fit inside the door with 4" to spare. Both pieces should fill one-half of the doorway on their own.

STEP
01

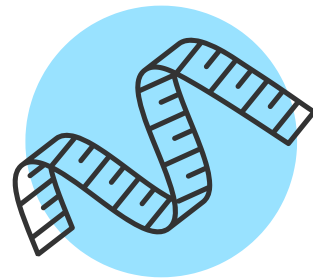

STEP
02

Sew the Mesh

Sew the magnets into the mesh fabric along the inside of the two mesh flaps. You want to space the magnets evenly along the inside of both pieces of mesh. Make sure the magnets on one piece match up with the magnets on the other piece. When you sew the magnets into the mesh, make sure to make a seam on all sides of the magnet. You need to create a pocket in the mesh fabric so the magnet won't shift or fall out.



Hang the Screen

Once the magnets are sewn into the mesh, you can hang the two halves of the mesh screen in your doorway. Secure it to the door frame on all sides so it doesn't come loose.

STEP
03

